

# USER MANUAL

K5540



## Precautions

1. Please read this manual carefully before using, and keep it well for future reference.
2. Before cleaning the tablet please unplug the power cord and wipe with a soft damp cloth, do not use any kind of detergents.
3. Don't expose this product to water or other liquids. Take care to never spill liquids onto the tablet and pen. Exposing this product to water or other liquids may cause product malfunction or electrical shock.
4. Do not place the tablet on where is unstable or a height for children reaching easily in order to avoid danger. Prevent children from swallowing the pen nib or side switch. The pen nib, side switch, or other movable parts may accidentally be pulled out if children are biting on them.
5. Power off your tablet in locations where/when electronic devices is not allowed. Because the tablet may cause other electronic devices to malfunction in some locations where/when the use of electronic devices is not allowed, such as within an airplane, be sure to turn off the tablet.
6. Do not disassemble the tablet and pen. Do not disassemble or otherwise modify the tablet or pen. Such action may cause heat generation, ignition, electronic shock, or other damage, including human injury. Disassembling the product will void your warranty.
7. While getting the components replaced, you are supposed to guarantee that the repairman is using the substitute components specified by the manufacturer. Unauthorized component replacement might cause fire, electric shocks or other dangers.
8. Do not insert foreign material into the USB port or any other opening of this product. If a metal object or foreign material is inserted into a port or other opening of this product it may cause the product to malfunction or burn out, or cause electronic shock.

## CONTENTS

<b>Precautions.....</b>	<b>- 1 -</b>
<b>1.Product Overview.....</b>	<b>- 3 -</b>
1.1 Tablet Introduction.....	- 3 -
1.2 Product and Accessories.....	- 3 -
1.3 Connecting to Computer.....	- 4 -
1.4 Driver Installation.....	- 5 -
1.5 AAA Battery Installation (Battery Not Included).....	- 5 -
1.6 Pen Nib Replacement.....	- 5 -
<b>2.Function Setting.....</b>	<b>- 6 -</b>
2.1 Control Interface Overview.....	- 6 -
2.2 Pen Pressure Test.....	- 6 -
2.3 Pen Button Settings.....	- 7 -
2.4 Working Area Setting.....	- 9 -
2.5 Pressure Sensitivity Setting.....	- 9 -
<b>3.Specifications.....</b>	<b>- 10 -</b>
<b>4.Trouble Shooting.....</b>	<b>- 11 -</b>
<b>5.Contact Us for After-sell Service.....</b>	<b>- 11 -</b>

## 1. Product Overview


### 1.1 Tablet Introduction

Thank you for purchasing **Kenting K5540** Tablet. This is a new generation of professional drawing tablet, which can greatly improve your work efficiency of painting and creation, and full of fun. You can freely painting and writing, depicting different lines and colors, just as the pen writes on the paper, which brings you a real shock experience.


To give you a better understanding and using of your tablet, please read this user manual carefully. The user manual only shows the information under Windows, unless otherwise specified, this information applies to both Windows and Macintosh systems.

### 1.2 Product and Accessories

#### 1.2.1 Graphics Tablet

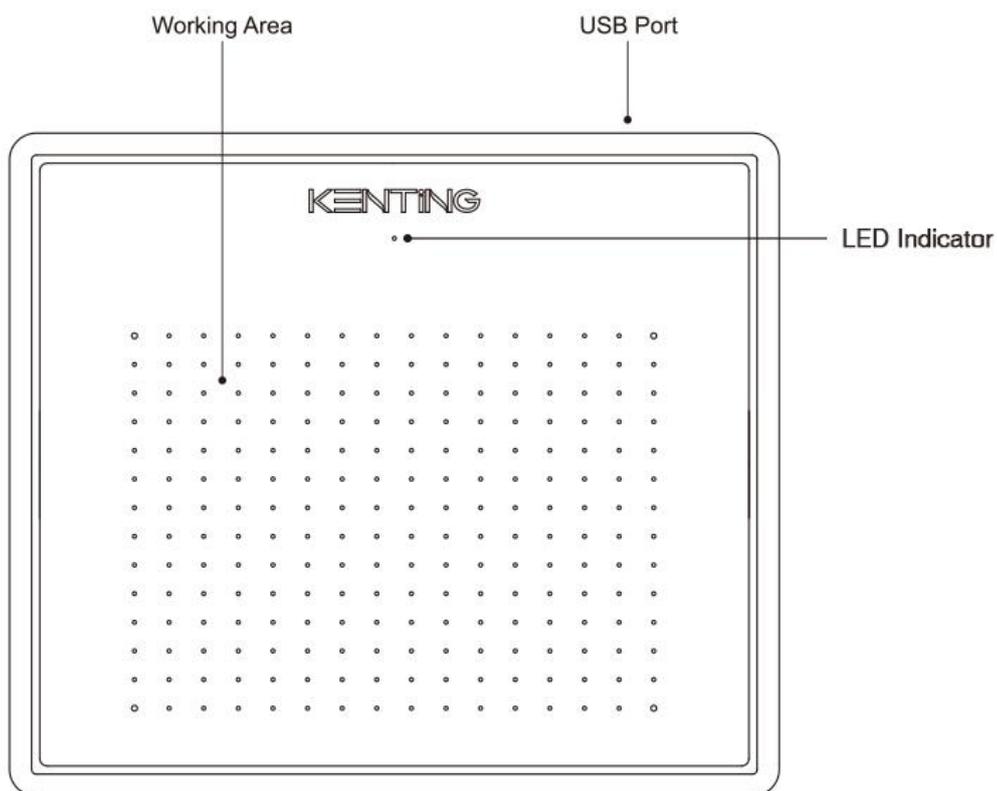


### 1.2.2 Packing List

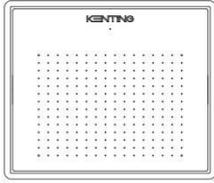

Pen Tablet




Digital Pen

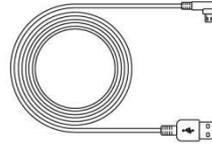

Micro USB



 Pen Nib Clip




Replacement Nibs



Quick Start Guide

### 1.3 Connecting to Computer

Connect the tablet to your computer with USB cable.

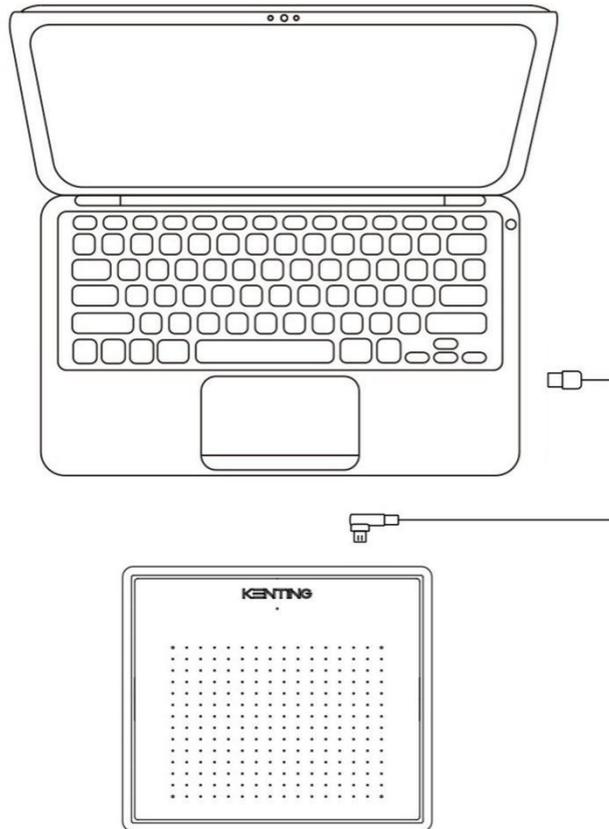

## 1.4 Driver Installation

### 1.4.1 OS Support

Windows 7 or later, macOS 10.08 or later

### 1.4.2 Install Driver

Please download the driver from our website: [www.kentingtablet.com](http://www.kentingtablet.com)


After finishing installation, you can find the driver icon  in the system tray area, which means the driver was installed successfully and you can start using it now.

Notice:

1. Before installing, you need to uninstall other driver of similar products, including the old driver of this product.
2. Before installing, please close all graphics software and anti-virus software to avoid unnecessary mistake.

## 1.5 AAA Battery Installation (Battery Not Included)


Unscrew the pen body, put an AAA battery, and please be attention to the side of + mark should towards the tip of the pen.

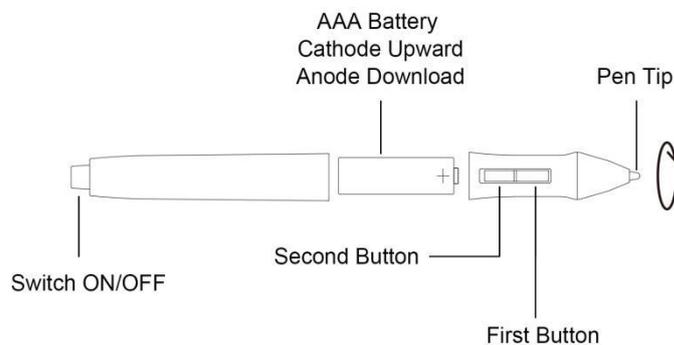

## 1.6 Pen Nib Replacement


Nib will be wear off after using for a long time, then you need to replace a new nib.

- 1) Use the pen nib clip to pull the old nib straight out of the pen. (①②)
- 2) Insert a new pen nib into the stylus and push the nib until it stops. (③④)

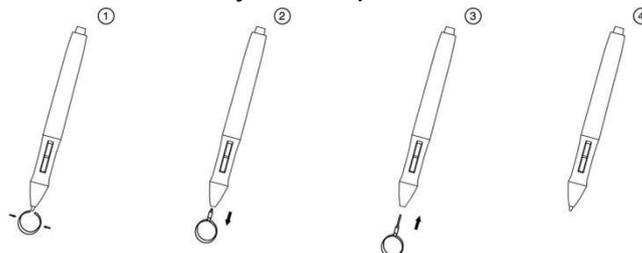

## 2.Function Setting

### 2.1 Control Interface Overview

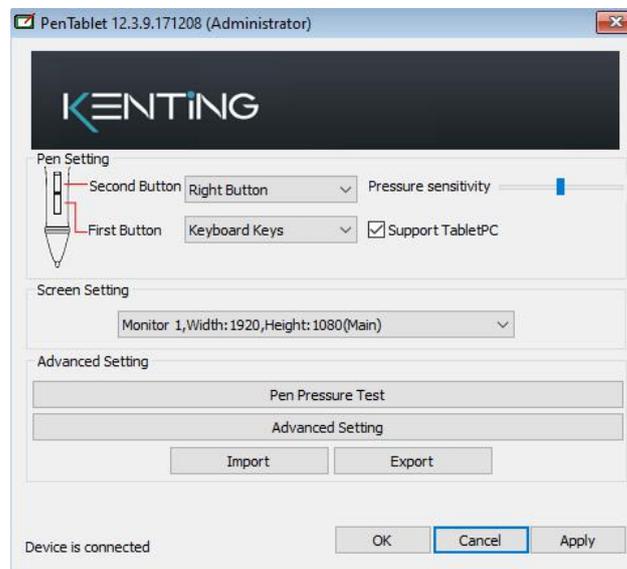


When you double click the driver tablet icon (  ) which normally appears in the system tray at the corner of the screen, you will see the control panel (pictured above). It will display driven-related information.



Controlling the panel by digital graphic tablet can set up functions for the button of the digital pressure-sensitive pen, regulate the pen ' s pressure sensitivity and modify the workspace and shortcut keys.

### 2.2 Pen Pressure Test

Click Pen Pressure Test into Pressure Sensitivity Testing

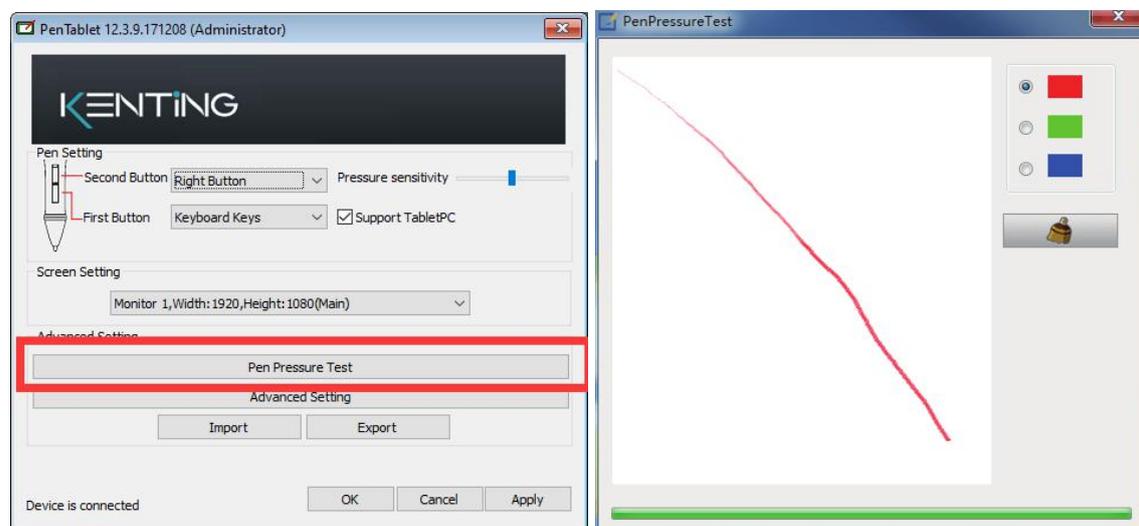

### 2.3 Pen Button Settings

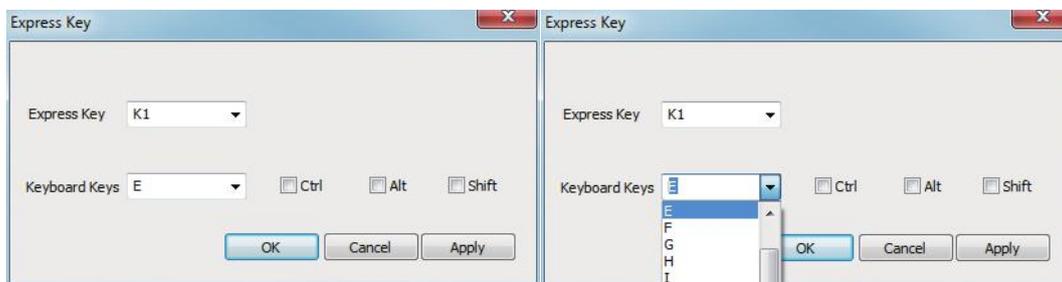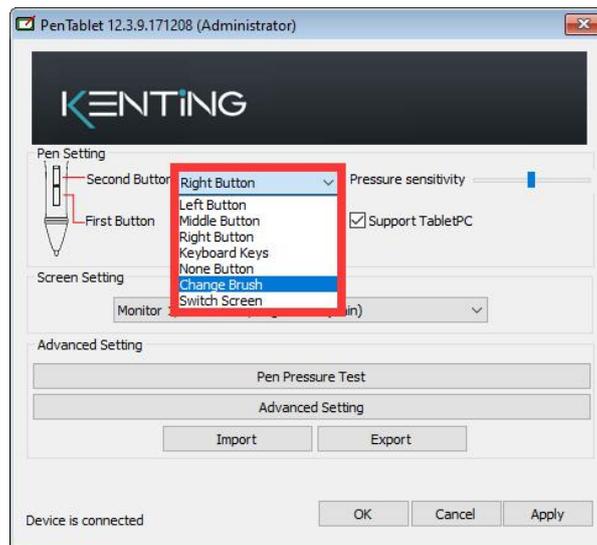

Below the key menu shows the defining keys of the digital pressure sensitive pen. Selecting its “left, middle, right, keyboard keys, no keys, change brush, switch screen” on the corresponding right drop-down menu of the pen function settings windows “the first button, the second button” can achieve its functions.


When finished the first key and the second key selecting the keyboard keys, all the other keys can be freely defined.

When this done, you can achieve all the shortcuts keys functions of the graphic software.

Digital pressure sensitive pen default setting functions:


- 1.The pen nib is equivalent to the mouse left button function.
- 2.When the first key is E, you can switch it to eraser in the graphic software(such as photoshop etc).
- 3.The second key is equivalent to the mouse right function

## 2.4 Working Area Setting

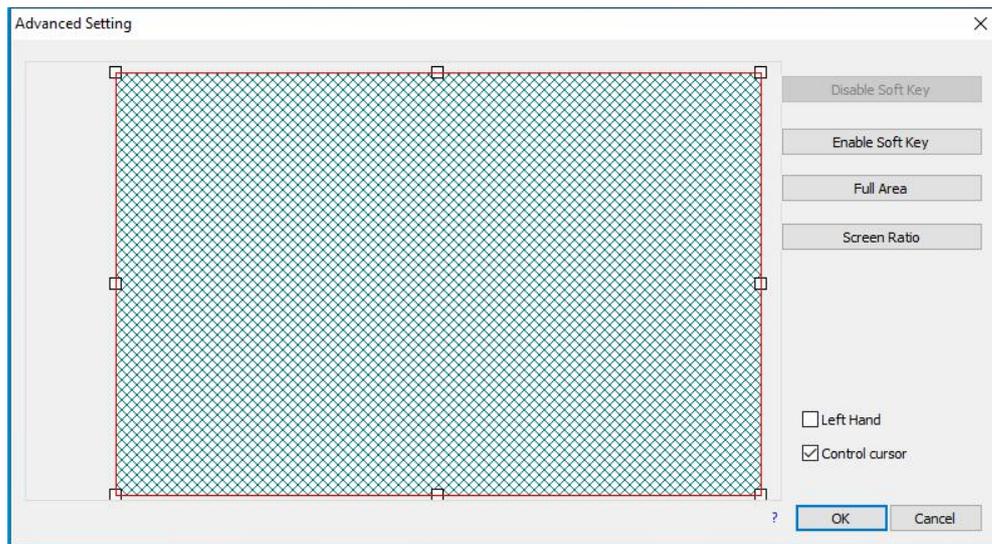

The work area can be changed by user

## 2.5 Pressure Sensitivity Setting

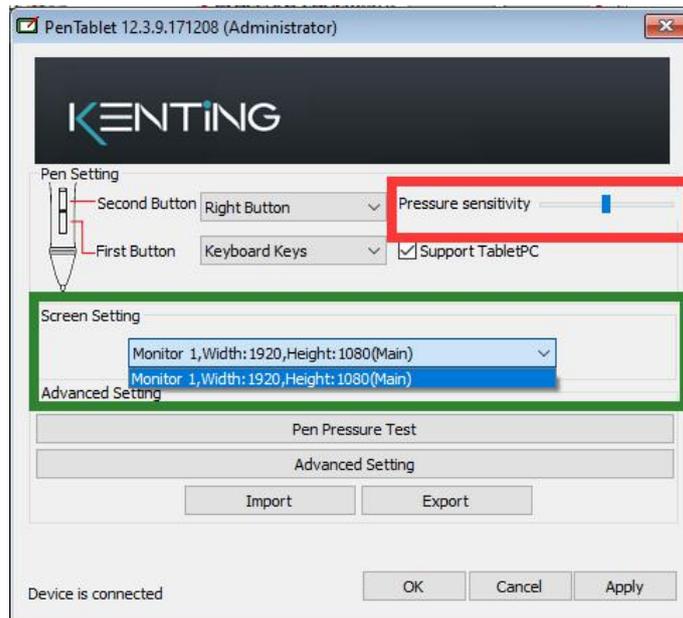

Pressure sensitivity: move the slider from left to right, it can be used to adjust the sensitivity of the tip and the severity of the stroke when drawing, which affects the change of the handwriting(red box area).

When your computer is connected with two screens and use the extended mode, you can choose the corresponding work area of the graphic tablet in the setup screen area(green box area).

### 3.Specifications

Model	K5540
<b>Touch Technology</b>	Electromagnetic Resonance
<b>Working Area</b>	137 x 99mm (5.4 x 3.9in)
<b>Dimension</b>	203 x 176 x 8mm (8.0 x 6.9 x 0.3in)
<b>Touch Resolution</b>	4000LPI
<b>Sensitivity Pressure</b>	4096/ 8192 Levels (Note 8192 is Upgrade Version)
<b>Report Rate</b>	200PPS
<b>Pen Sensing Height</b>	10mm
<b>Interface</b>	Micro USB
<b>OS Support</b>	Windows 7 or later, mac OS 10.08 or later
Model	Z5
<b>Dimension</b>	149 x $\Phi$ 14mm
<b>Weight</b>	22g

## 4. Trouble Shooting

Abnormal Phenomena	Possible Solutions
There is no pressure in the graphics software but the cursor moves	You may have installed other tablet drivers or opened the drawing software when installing the driver. Please uninstall all drivers and close the drawing software, then re-install the driver. It's better to restart your computer after finishing the installation.
The pen does not work	<ol style="list-style-type: none"> <li>1. Make sure you put an AAA battery inside the pen and press the button on the top of the pen to turn it on.</li> <li>2. Make sure you installed the driver correctly.</li> </ol>
The computer can't enter sleep mode	When you are not using the tablet, please do not keep the pen turn on and put it on the tablet surface (please press the button on the top of the pen to turn it off), which will keep the computer awake.
The side button of the pen doesn't work	When pressing the side button, please make sure that the nib didn't touch the tablet surface and the distance between the nib and surface is less than 10mm.
The computer can't recognize the tablet	Make sure the USB port is functional, if not, please change to another USB port.

**For more FAQ, please feel free check:**

[www.kentingtablet.com/Support/FAQ](http://www.kentingtablet.com/Support/FAQ)

## 5. Contact Us for After-sell Service

Kenting Office

✉ [service@kentingtablet.com](mailto:service@kentingtablet.com)

🌐 [www.kentingtablet.com](http://www.kentingtablet.com)